The Billboard

360° Messaging


Twice as Big Signicade

**PLASTICADE®** 

- Twice as big as a Signicade®
  - perfect for eye-catching outdoor advertising
- Six signs per frame
  - two 36"x48" signs

  - two sided top rider
- Wheels for easy movement
  - no installation needed
- Quick-Change<sup>™</sup> Feature

  - change signs in seconds, slide in a signuse rigid sign material 3/16" thick or less
- "Stay Tabs" hold main signs securely in place
- Internally weight with dry sand
- Available in white and black

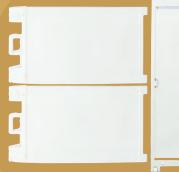

Signicade® 6 square feet/side Main Sign Message Area



12 square feet/side Main Sign Message Area



# The Billboard

**OUTSIDE DIMENSIONS**: 58"H X 39"W x 3.125"D

**DIMENSIONS OF RECESSED AREA:** 46.75"H x 36.25"W

WEIGHT: 45 lbs.

COLORS: White, Black, Custom Colors Available

**6 SIGNS PER FRAME** 

#### Sand Ballasting Instructions




Sand Fill Holes

There is two holes for filling the sign frame with sand.


Remove plug from hole, fill with sand and then replace plug. Shake the sign frame to evenly distribute the sand at the bottom of the frame. 5 lbs. of sand per hole is recommended, for a total of 10 lbs.

Play sand is suggested for ease of filling.

## **Main Signs Insertion Instructions:**

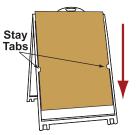

 1. Slide 36" x 48" sign down through the tabs



2. ...until sign rests on ground




Push sign up into slot



Slide sign down into bottom slot

#### Main Signs

Holds Signs 36"W x 48"H (up to 3/16" thick)

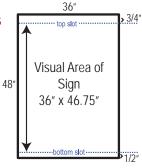

### **Top Rider Insertion Instructions:**

#### Insert Top Rider Before Inserting Side Signs

Stand the frame on the ground, spreading open the sign faces only half way. Place the Sign Rider in the opening at the top between the sign faces. Now, move the sign faces apart until fully extended.


You may want to cut a hole in the rider to make the handle accessible.



## **Side Signs Insertion Instructions:**

A cutting template is available at plasticade.com. Holds signs up to 1/4" thick.

If using corrugated plastic sheet for side signs, cut so flutes run horizontal to ground.

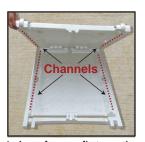


 Lay frame flat on the ground. Lift up the top sign face.

Holes



 into top and bottom channels on one side of frame.






3. Slide second Side Sign into top and bottom channels on other side of frame.



#### Stabilizing Bar

 Use the Stabilizing Bar to prevent the spreading of the sign faces too far.



Place bar in holes at bottom of the sign frame

to use.

Bar in use

## **PLASTICADE**

7700 Austin Avenue Skokie, IL 60077 phone (800) 772-0355 fax (847) 966-8074 www.plasticade.com

MADE IN THE USA US PATENTS 7,337,569 & 7,748,151

